





- 6 (10) APPLY LOCTITE 242 OR EQUAL
- (5) APPLY LOCTITE 567 OR EQUAL
- 20) APPLY LOCTITE 271 OR EQUAL TO COARSE THREAD END ONLY

SEE INSTALLATION MAINTENANCE MANUAL FOR TORQUE